

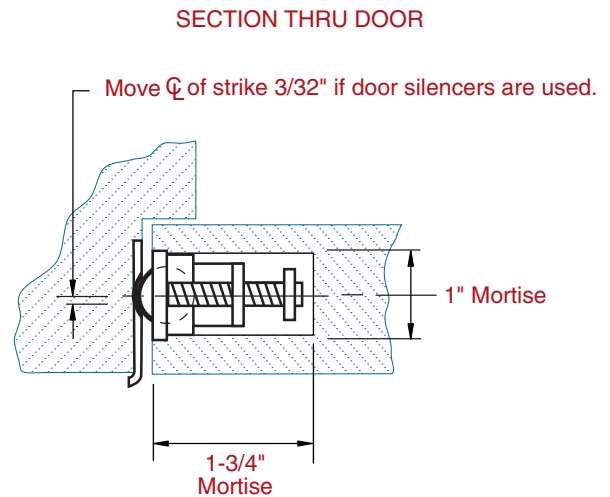


590, 591, 592 Roller Latch

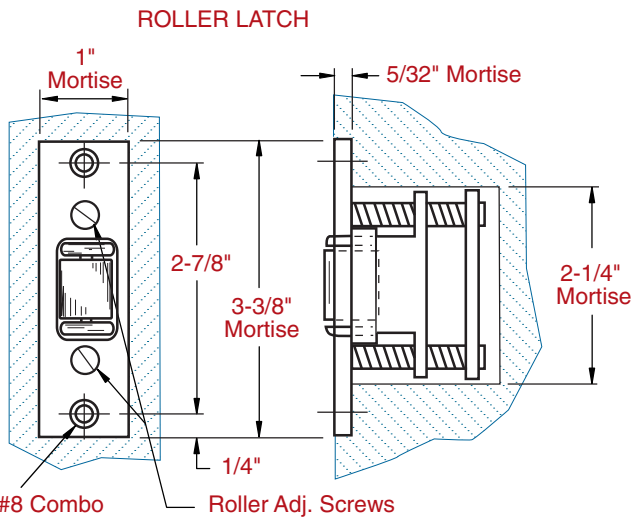


NOTE: Mortise dim's used only on wood doors.


#591 ROLLER STRIKE

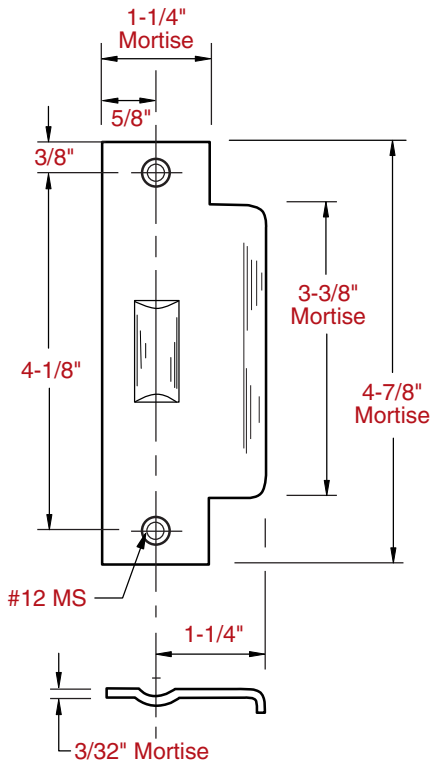

#592 ROLLER STRIKE

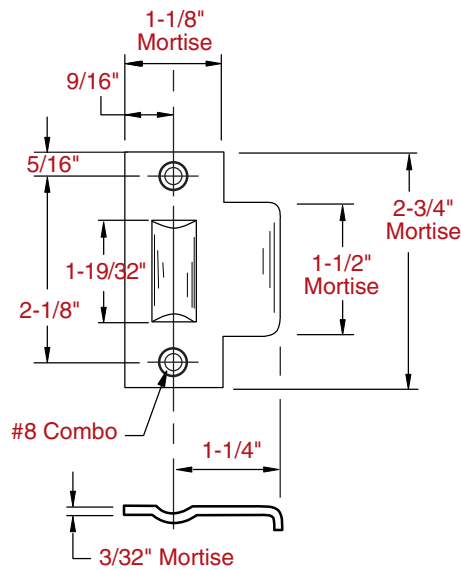

#590 ROLLER STRIKE

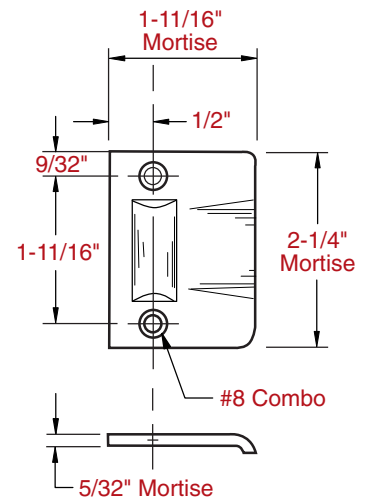

Not To Scale

Template No.
T-590, 591, 592
Rev. 1/29/09

NOTE: Rockwood reserves the right to make product changes and is not responsible for obsolete template errors. To ensure your template is current, please visit our website at www.rockwoodmfg.com or call us at 800-458-2424.